



CiphercoN™ 1500

Fully Automated Hazardous Gas Cabinet

Standard Configurations

- 2-cyl, [1-process, 1-purge]
- 2-cyl, [2-process], external purge source
- 3 cyl, [2-process, 1-purge]
- Independent out or auto-switchover
- Cabinet-to-cabinet switchover

Standard Controls / Features

- PLC control of all critical functions
- Bright 10.4" color touch screen interface
- Proven auto-sequenced routines for all aspects of operations and maintenance
- User settable limits for all process and alarm parameters
- Exhaust pressure monitor
- On-screen warnings, alarms, prompting and instructions
- Emergency Off (EMO)
- EMO and EGO inputs
- Alarm outputs
- Multi-level password protection
- Diagnostics screen
- Valve cycle count screen
- Z-Purge ready for Class I Div II compliance

The CiphercoN™ 1500 Fully Automated Gas Cabinet is representative of SDC's continuous drive and commitment to providing the industry's safest and most reliable Ultra-High-Purity (UHP) specialty gas equipment available. Mass customization and modular design concepts of the gas panels, controls architecture and cabinet enclosure have combined to widen the product configuration spectrum and greatly increase user flexibility. From the Fab to the Lab to the University, SDC sets itself apart as the clear choice for **value** in today's budget-conscious environment.



2-Cylinder Cabinet

SDC, A Total Solutions Provider for Your Gas and Chemical Management Needs

1117 Kings Highway

Saugerties, NY 12477

Tel 845.246.3631

Fax 845.246.1595

www.stainlessdesign.com

SDC_CiphercoN_1

CiphercoN™ 1500

Fully Automated Hazardous Gas Cabinet

Process Panel Features

- Ultra-High-Purity (UHP) 316L SS or VAR construction
- Surface finish 10 Ra avg. or better
- Springless diaphragm valves
- Tied-diaphragm process regulator
- Precision flow sensor
- Vacuum assisted purging
- UHP orbitally welded with strategic VCR® breaks
- Helium leak tested to 1.0×10^{-9} atm*cc/s
- CLASS 100 / CLASS 10 clean room assembly and tested

Dimensions*

- 1 cyl. - 18"W x 84"H x 19"D
- 2 cyl. - 24"W x 84"H x 19"D
- 3 cyl. - 36"W x 84"H x 19"D


* Height dimensions include controller. Add 6.0" to width with cylinder heating option.

Codes and Standards Referenced

- SME Section IX
- SEMI™ S2 Safety Guidelines for Semiconductor Manufacturing Equipment
- NFPA® 79, 496, 70 [NEC®]
- Factory Mutual®
- UL®
- CE®

SDC

OEM discounts and private-labeling services available.

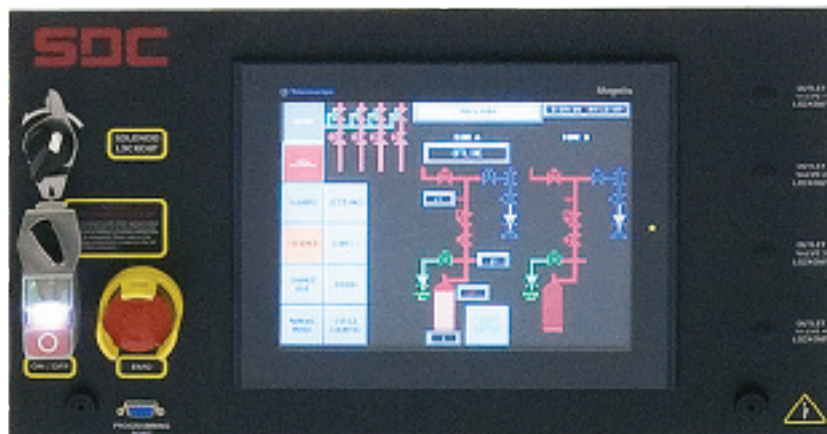

Large 10.4" color touch screen interface

The CiphercoN™ 1500 makes it simple to meet your exact gas delivery needs. Our Modular Design Concept allows for component-level replacement, ease of service and upgradeability. Begin by choosing one of several "core" gas cabinet configurations. Start customizing right at the gas panel level with standard choices for regulator type, valve type, transducer ranges and purity level. Zero in further with a myriad of options like: integrated scales, onboard gas leak detection, purgeable splitters, RFO, filtration, purification, and many more. SDC's SPEC ✓™ worksheet will walk you through this process in a simple, step-by-step manner. SDC Sales Engineers are always available to work through the customization process with you, either by phone, or in person.

FACILITIES REQUIREMENTS

Pneumatic Supply	Adjustable to 90 psig	1 slm max.
Process Purge	Adjustable to 80 psig	30 slm max.
Vacuum Drive	Adjustable to 85 psig	85 slm max.
Process Vent	>1.0" WC	100 slm
Power	115V/3A	N/A
Sprinkler [if used]	30 psig	31 gpm
Exhaust*	0.15" WC	300 scfm (2-cyl)
	0.15" WC	450 scfm (3-cyl)

* Damper must be adjusted to meet 200 fpm face velocity as required by UFC

SDC, A Total Solutions Provider for Your Gas and Chemical Management Needs

1117 Kings Highway

Saugerties, NY 12477

Tel 845.246.3631

Fax 845.246.1595

www.stainlessdesign.com

SDC_CiphercoN_1